

Aluminum Fuel Nipple

- Use for an extra fill or pressure port.
- Accepts standard and large tubing.

Instructions

Follow these instructions carefully.

- 1) Drill a 1/4" hole in the desired location on your tank.
- 2) From the stopper hole feed a small string or wire through the neck and out the hole you drilled.
- 3) Feed onto the wire or string the nipple from the neck side of the tank.
- 4) Put a knot on the string or crimp the wire behind the nipple on the neck side opening of the tank.
- 5) Pull the wire or string out the 1/4" hole dragging the nipple out, round end first. Now that the nipple is out, the back plate of the nipple is now flush against the inside of the tank.
- 6) Keep holding the string or wire with tension and thread the nylon washer and then the nut to secure the nipple.